

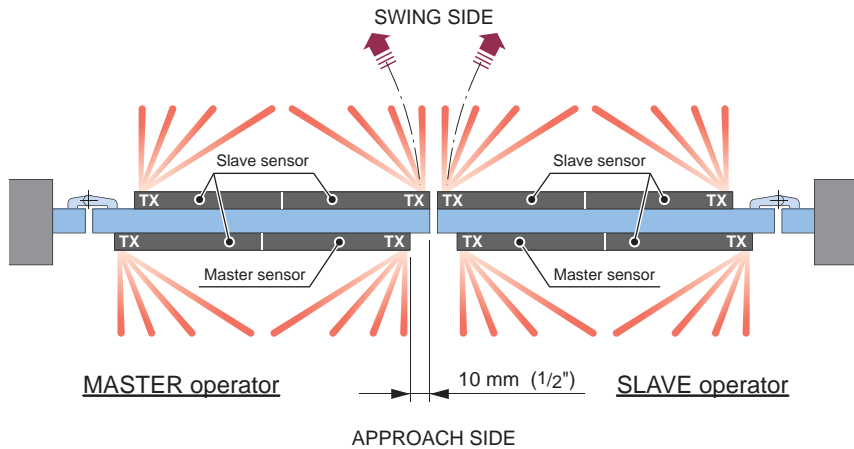


\*) When selecting NO, remove jumpers for both presence impulse Master and Slave

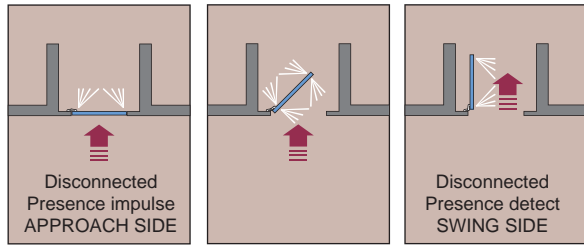


## MASTER operator

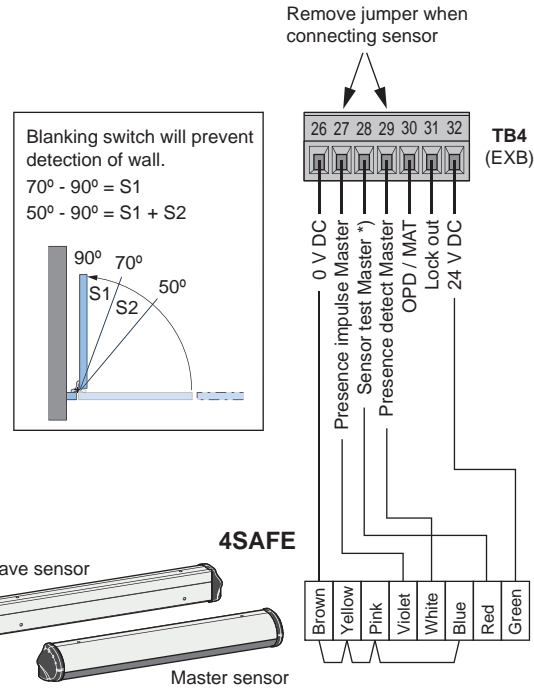

### Monitoring

- \*) Remove jumper "Sensor monitoring" on CSDB to enable sensor test.
- Slave sensor is connected to Master sensor via enclosed cable.
- Presence impulse must be configured NC.

## SLAVE operator

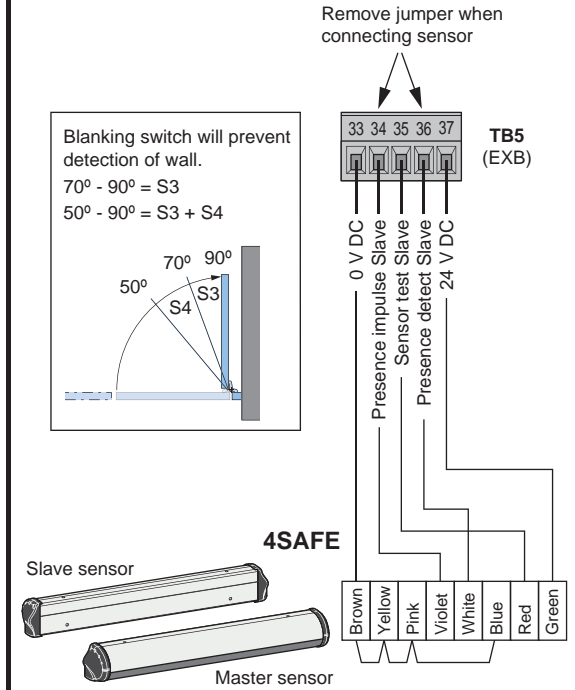

Presence sensor 4SAFE

CSDB & EXB

Connection drawing

